



Make Every Moment Count!®

GETTING STARTED WITH YOUR TIME TIMER® MEDIUM RETRO ECO EDITION




Congratulations on the purchase of your new Time Timer® Medium RETRO Eco Edition. We hope that it helps you make every moment count!

1

INSTALL 1 AA BATTERY


The battery compartment is located on the back of the Time Timer® Medium RETRO Eco Edition visual timer. Simply lift battery cover up to insert battery into compartment. Replace battery cover by aligning tabs on top edge and gently pushing until you hear a "click". Requires 1 AA battery.

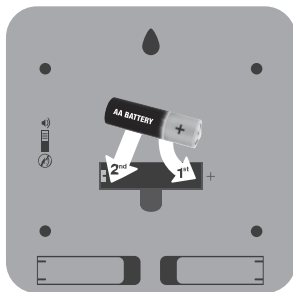

2

CHOOSE YOUR SOUND PREFERENCE


The timer itself is quiet—no distracting ticking sound - but you can choose whether or not to have an alert sound when time is complete. Simply use the on/off switch on the back of the timer to control audio alerts.

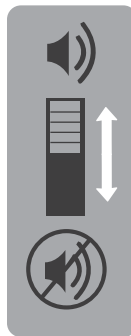

3

SET YOUR TIMER

Use the clear button on the disk and turn counter-clockwise until you reach your chosen amount of time. Immediately, your new timer will begin to countdown, and a quick glance will reveal the time left thanks to the contrasting disk and large, easy-to-read numbers.

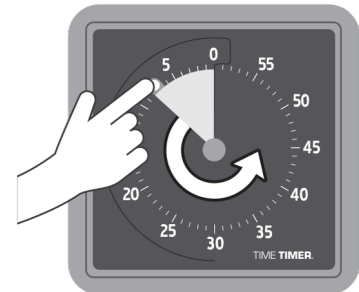

BATTERY RECOMMENDATIONS

We recommend using high-quality, name-brand alkaline batteries to ensure accurate timing. You may use rechargeable batteries with Time Timer, but they may deplete more quickly than traditional batteries. If you do not plan to use your Time Timer for an extended period of time (several weeks or more), please remove the battery to avoid corrosion.



scan for additional
battery information

PRODUCT CARE

Our timers are manufactured to be as durable as possible, but like many clocks and timers, they have a quartz crystal inside. This mechanism makes our products quiet, accurate and easy to use, but it also makes them sensitive to being dropped or thrown. Please use with care.

QUESTIONS? WE'RE HERE TO HELP: INFO@ROBO-TOYS.COM